


Tearbar Printer Kit for Easy Pump

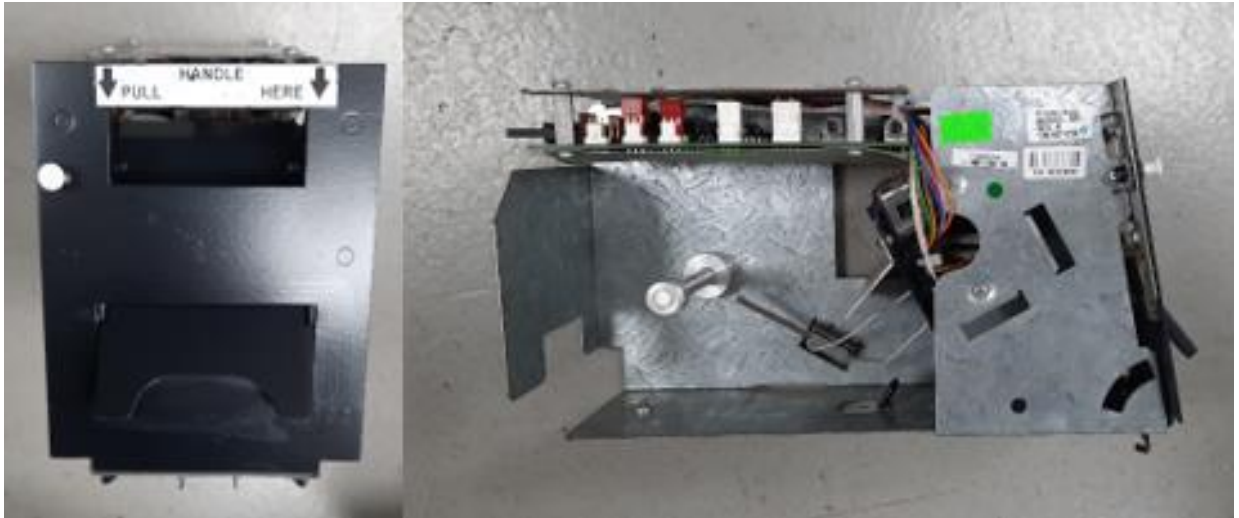

For Wayne Tearbar printers to operate with Easy Pump:

- This kit must be installed.
- The FIM-20 must be programmed for DW-10/DW-12 & baud rate 38400.
 - The printer must be set to baud rate 38400.




Parts List:

Converter Board	SC00028
FIM-20 Data Cable	SC00002
Power Cable	SC00013
Printer Data Cable	FC00004
Adhesive Backing	

Freedom Electronics 800-761-9369

Kit Installation

1. Using the adhesive backing, mount the Converter Board(SC00028) to the SV00002 bracket above the FIM-20.
2. Attach the SC00002 cable between J1 on the converter board and the FIM-20.
3. Attach the FC00004 cable between J50 on the converter board and P2 on the printer.
4. Attach the SC00013 cable between J2 on the converter board and J2 of the Easy Pump Power Supply.

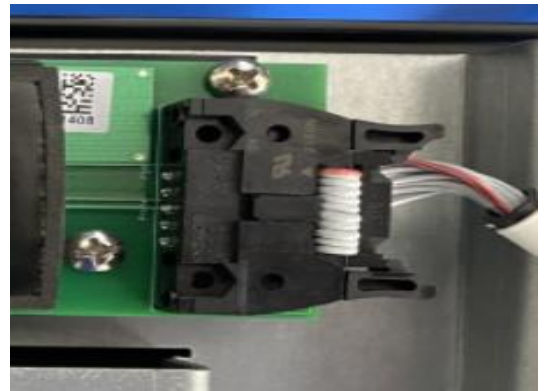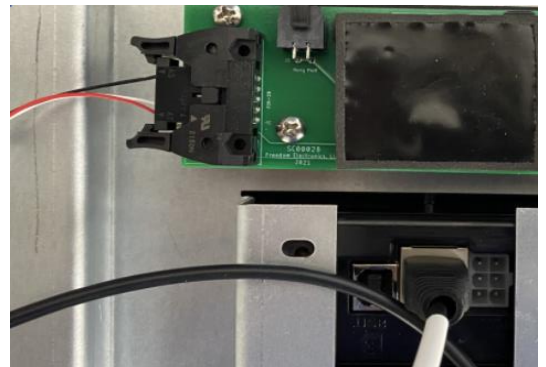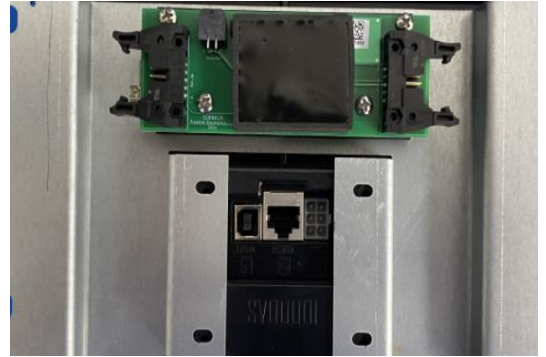

FIM-20 Printer Setup

The printer type and baud rate should be pre-programmed according to the site survey.

Contact Freedom Electronics technical support if programming is incorrect to prevent future issues.

To manually set:





1. Touch the corners of the FIM-20 screen in the following sequence: Top left, top right, bottom right, bottom left.

Password: Today's date
"MMDDYYYY" - sometimes
tomorrow's date depending on
UTC time.

2. Select Operation Settings


3. Select Peripherals

4. Select External Printer

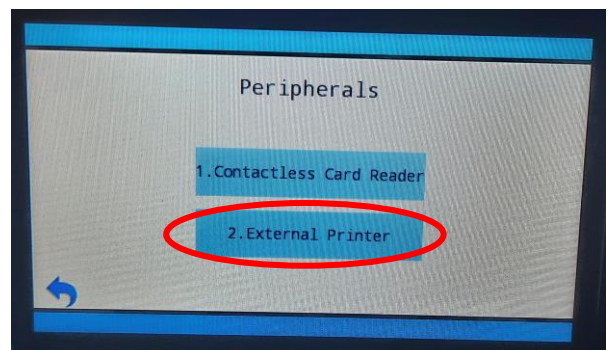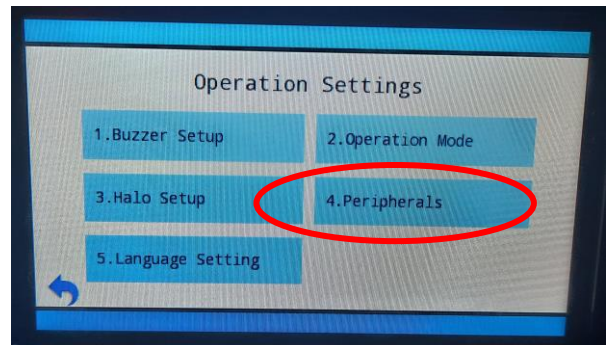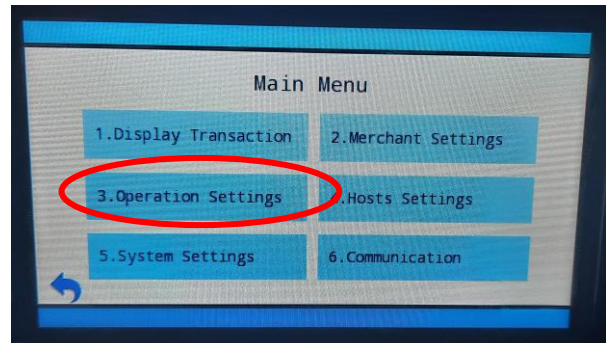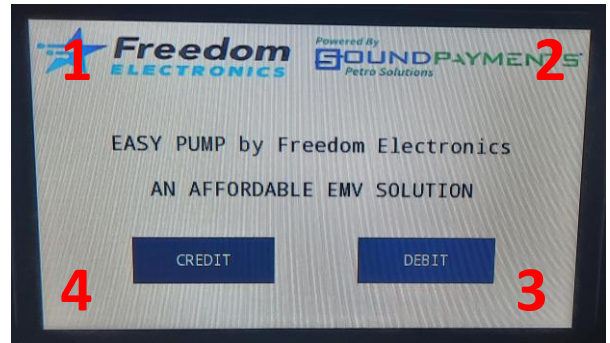


FIM-20 Printer Setup


5. Select DW-10/DW-12

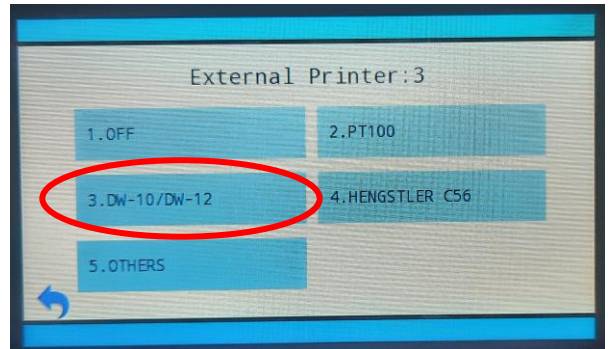


6. Select Baud Rate

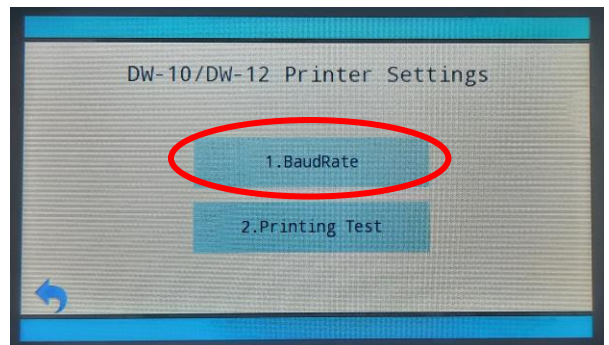

7. Select 38400

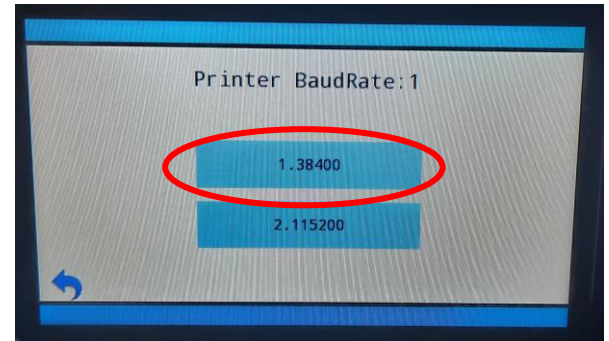

8. Select Printing Test
The printer will print a short test receipt.

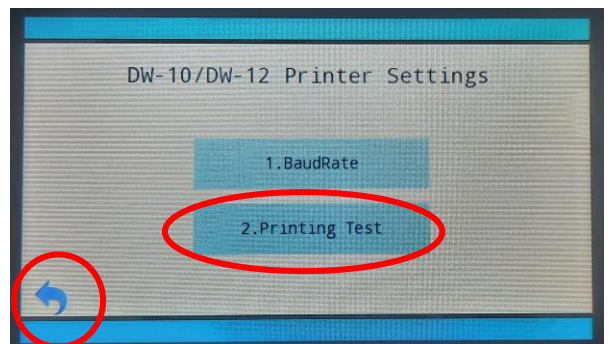

9. Back out of programming using the back arrow.