

## **FE-UPPU Display Board**


800-761-9369

Off: Grade not used

On: Grade used

DS3

Enable

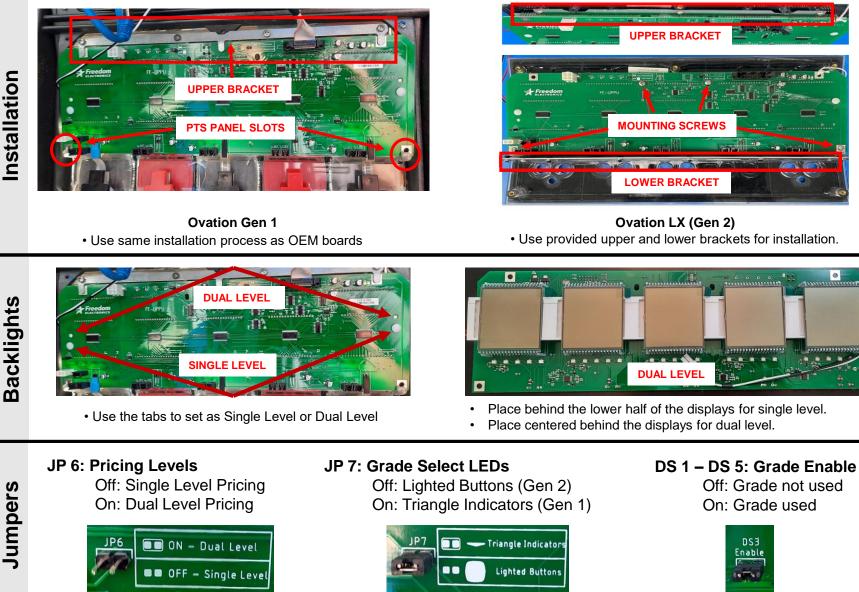

0 \*\*\*\*\*\*\*\*\*\*\*\* EAMAGER TO DO DO **DUAL LEVEL** 

- Place behind the lower half of the displays for single level.
- Place centered behind the displays for dual level.

For more information, see the FE-UPPU Installation Manual at Freedomelectronics.com.