


FE-14 Printer

Loading Paper

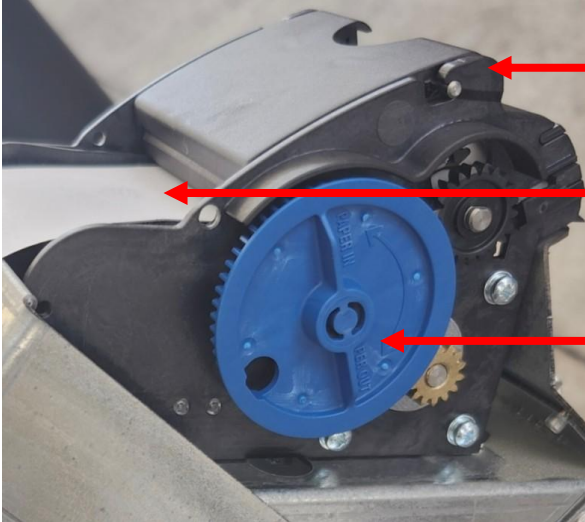

Verify the pin is seated and print head closed before loading paper.


Slide paper into the print head and it will self feed.

Use the blue wheel to turn the roller as needed.

Use canned air to clean any dust/debris.



Clearing Paper Jams

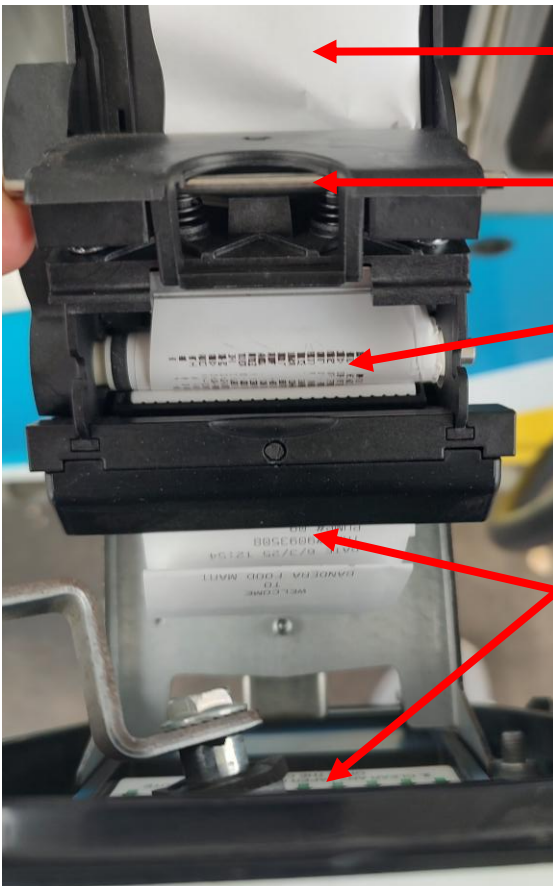

Tear off the roll of paper leaving a few inches coming from the printer.

Raise the printer head up by squeezing the pin and lifting.

Remove any paper around the roller by pulling the paper forward and/or backwards, as necessary. Use the blue wheel to spin the roller and assist with removing all of the paper.

Be sure to clear all paper debris. Canned air may be helpful.

Verify there is not paper in the printer chute or the door chute.

Close the printer head and reload paper by inserting it into the paper path. A test printout should be printed. If the printer clicks, but does not print, it likely still detects a paper jam in the chute or roller.